

# NINJA®

BL682Q Series  
OWNER'S GUIDE



[www.ninjakitchen.com](http://www.ninjakitchen.com)

# IMPORTANT SAFETY INSTRUCTIONS

## For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NUTRI NINJA® | NINJA® BLENDER SYSTEM WITH AUTO-iQ™ TECHNOLOGY.

### POLARIZED PLUG

**⚠ WARNING:** To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT** modify the plug in any way.

**⚠ WARNING:** Extension cords are not recommended for use with this product.

**⚠ WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- 1 **⚠ CAUTION:** Blade assemblies are sharp, not locked in place and removable, handle with care. When handling the blade assemblies, always hold them by the shaft.
- 2 **⚠ CAUTION:** Blade Assemblies are not locked in place and are removable. If using the pour spout, ensure the lid is fully locked onto the pitcher. If pouring with the lid removed, ALWAYS remove the blade assembly first.
- 3 **⚠ CAUTION:** Do not blend hot liquids.
- 4 **⚠ CAUTION:** We do not recommend grinding in any of our Nutri Ninja® Cups.
- 5 To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
- 6 **DO NOT** allow children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 7 Never leave an appliance unattended when in use.
- 8 Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.
- 9 Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.

- 10 **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- 11 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts. Return the appliance to SharkNinja Operating LLC for examination, repair or adjustment.
- 12 **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- 13 Always use appliance on a dry, level surface.
- 14 Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- 15 Avoid contact with moving parts.
- 16 **DO NOT** attempt to sharpen blades.
- 17 **DO NOT** use the appliance if blade assembly is bent or damaged.
- 18 To reduce risk of injury, never place the blade assembly on base without pitcher or bowl properly attached.
- 19 **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- 20 The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- 21 **DO NOT** remove the container from the motor base while the appliance is in operation.
- 22 To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
- 23 **DO NOT** expose containers to extreme temperature changes.
- 24 **DO NOT** overfill.
- 25 **DO NOT** operate the appliance empty.
- 26 To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
- 27 In the event that the unit overloads, the control panel lights will flash and the unit will shut down. Unplug the appliance and let it cool down for approximately 15 minutes before using again.
- 28 **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
- 29 The maximum rating is based on the Stacked Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.

# SAVE THESE INSTRUCTIONS

Thank you for  
purchasing the  
Nutri Ninja® |  
Ninja® Blender  
System with  
Auto-iQ™  
Technology.

Getting to Know Your Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology .....5  
Using the Nutri Ninja® | Ninja® Kitchen Blender System with Auto-iQ™ Technology .....7  
Assembly and Use for the Ninja® Blender .....8  
Assembly and Use for the Food Processor .....10  
Assembly and Use for the Mini Prep Bowl .....12  
Assembly and Use for the Nutri Ninja® Cups .....13  
Speed Settings & Uses .....14  
Care & Maintenance .....16  
Troubleshooting Guide .....17  
Replacement Parts .....17  
Warranty & Registration .....18

 
 
 
**THIS BOOK COVERS MODEL NUMBERS:**

BL682QBK  
BL682QPL  
BL682QCN  
BL682QT

**TECHNICAL SPECIFICATIONS**

Voltage: 120V~, 60Hz.  
Power: 1500 Watts  
Pitcher Capacity: 72 ounces (9 cups, 2.1 L)  
    MAX Liquid Capacity: 64 ounces (8 cups, 1.9 L)  
Bowl Capacity: 64 ounces (8 cups, 1.8 L)  
Nutri Ninja® Cup Capacity: 18 ounces (2.25 cups, 530 mL)  
    24 ounces (3 cups, 710 mL)  
    32 ounces (4 cups, 950 mL)

## Getting To Know Your Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology

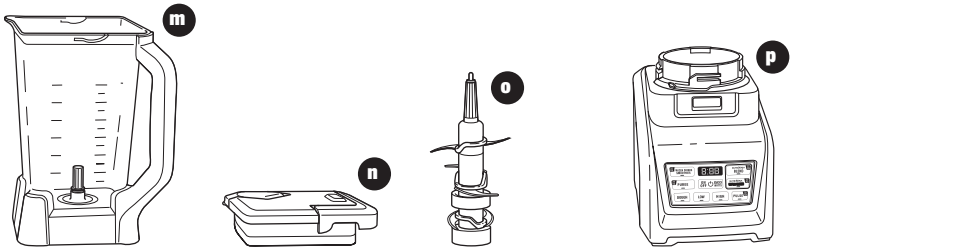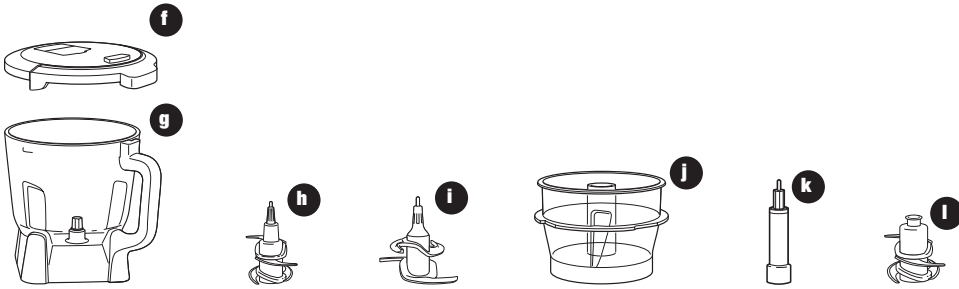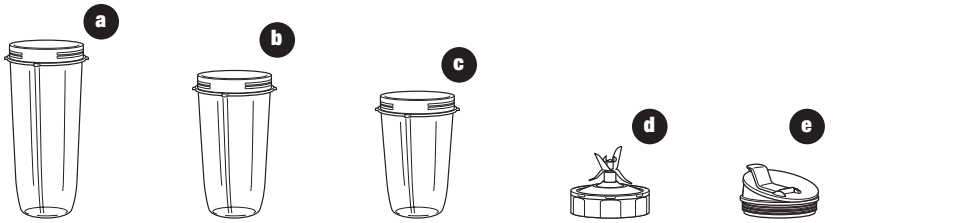

**a** Jumbo Multi-Serve 32 oz. Nutri Ninja® Cup

**b** Regular 24 oz. Nutri Ninja® Cup

**c** Small 18 oz. Nutri Ninja® Cup

**d** Pro Extractor Blades® Assembly

**e** Sip & Seal® Lids (x3)

**f** Food Processor Lid

**g** Food Processor Bowl

**h** Chopping Blade Assembly (food processor)

**i** Dough Blade Assembly (food processor)

**j** Mini Prep Bowl

**k** Spindle for Mini Prep

**l** Mini Prep Bowl Blade Assembly

**m** Blender Pitcher

**n** Blender Lid with locking handle

**o** Stacked Blade Assembly (blender)


**p** Motor Base

The Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology is a professional, high powered innovative tool with a sleek design and outstanding performance, a true asset to any kitchen. The Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology features intelligent programs that provides unique pulsing, blending and pausing patterns that do the work for you! Get great results every time with no guesswork required! For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

### Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology Features:

- 5 Auto-iQ™ settings - Auto-iQ™ Frozen Drinks/Smoothies, Auto-iQ™ Food Puree, Nutri Ninja® Auto-iQ™ Blend, Nutri Ninja® Auto-iQ™ Ultra Blend and Auto-iQ™ Pulse
- Ninja® Blade Technology
- BPA Free Blender Pitcher, Nutri Ninja® Cups, Food Processor Bowl and Lids
- Total Crushing® Technology
- LED Control Panel with Timer
- Sturdy, Non-Slip Base
- Smart Lid technology for easy release
- 3 speeds: Low/Dough, Medium, & High
- Nutri Ninja® Nutrient & Vitamin Extraction\*
- Drip-Free Pour Spout

 
\* Extract a drink containing vitamins and nutrients from fruits and vegetables

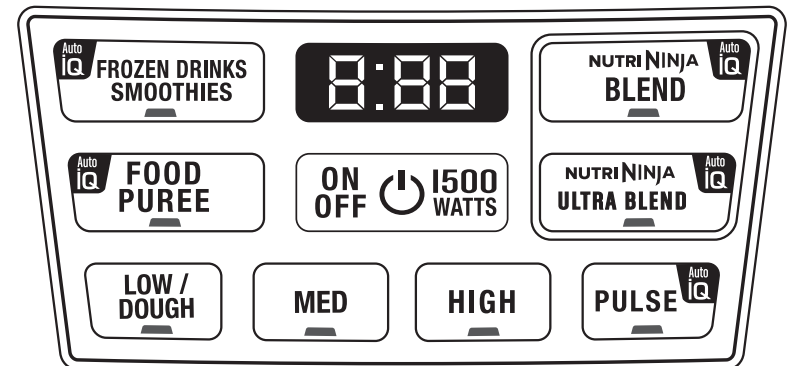


**PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:**

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **CAUTION:** Blade assemblies are sharp, not locked in place and removable, handle with care. When handling the blade assemblies, always hold them by the shaft.
  - ⚠ **CAUTION:** Do not blend hot liquids.
  - ⚠ **CAUTION:** Never remove the container while the appliance is still running.
- IMPORTANT:** Never add ingredients into the container before placing the blade assembly in first.
- IMPORTANT:** Blade Assemblies are not interchangeable.
- IMPORTANT:** DO NOT attempt to operate the appliance without the lid on.
- IMPORTANT:** Never run the appliance empty.
- IMPORTANT:** Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

 ⚠ **CAUTION:** Blade Assemblies are not locked in place and are removable. If using the pour spout, ensure the lid is fully locked onto the blender pitcher.

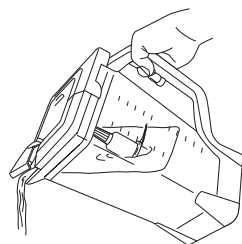

 ⚠ **CAUTION:** Blade Assemblies are not locked in place and are removable. If pouring with the lid removed, ALWAYS remove the Blade Assembly first.

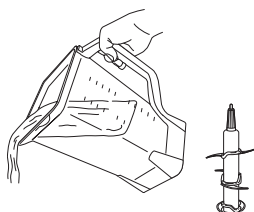

⚠ **CAUTION:** Blade assemblies are sharp, not locked in place and removable, handle with care. When handling the blade assemblies, always hold them by the shaft.


**BEFORE FIRST USE**

 - 1 Remove all packaging material and labels from the appliance.
- 2 Wash the lids, blender pitcher, food processor bowl, Nutri Ninja® cups and blade assemblies in warm, soapy water with a soft cloth.
- ⚠ **CAUTION:** Handle the the blade assemblies with care when washing, as the blades are very sharp.
- 3 Rinse and dry thoroughly.
- 4 The blender pitcher, food processor bowl, Nutri Ninja® cups, lids and blade assemblies, are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure that the blade assemblies are removed from the containers before placing in the dishwasher.
- 5 Wipe the motor base clean with a damp cloth.

**Assembly and Use for the Blender**

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **WARNING:** Remove utensils prior to processing.
  - ⚠ **CAUTION:** Use caution when handling the Stacked Blade Assembly as the blades are very sharp.
  - ⚠ **CAUTION:** Do not blend hot liquids.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

**ASSEMBLY**

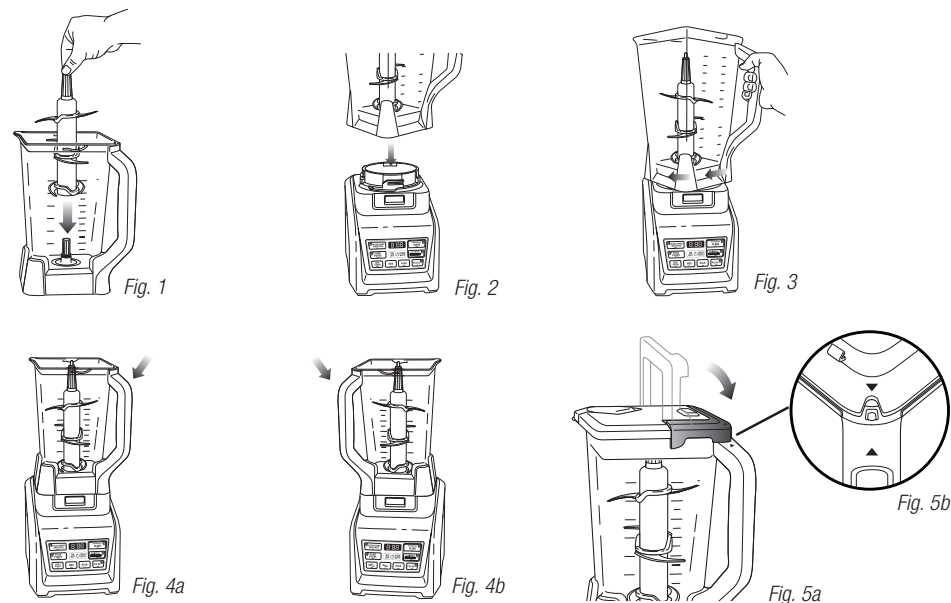

- 1 Holding the Stacked Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the Stacked Blade Assembly is seated properly and is standing upright. **(Fig. 1)**  
**NOTE:** The Stacked Blade Assembly will fit loosely on the drive gear.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table top. Press down on the motor base to make sure that the suction cups adhere to the counter or table top.
- 3 Align and lower the pitcher onto the motor base. **(Fig. 2)** Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
- 4 Rotate the pitcher clockwise until it locks in place, you will hear a click when the lock is engaged. **(Fig. 3)**
- 5 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. **(Fig. 4a, Fig. 4b)**
- 6 Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.

- NOTE:** If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.
- NOTE:** When blending any kind of liquids, such as mixtures of any drinks or smoothies, do not exceed the "Max liquid" mark (64 ounces) on the pitcher
- 7 Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the triangle (▼) located on the lid with the triangle (▲) located on the pitcher's handle. **(Fig. 5a)** Press the handle down until you hear a click. The triangles on the lid and the blender handle **MUST** be aligned in order for the blender to turn on. **(Fig. 5b)**
  - 8 Plug the power cord into the electrical outlet and press the power button (⏻).
- IMPORTANT:** As a safety feature, the power light (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power light (⏻) will be solid, indicating that the appliance is ready for use.



## Assembly and Use for the Blender - cont.

### USE



Fig. 6

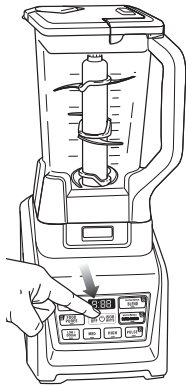 


Fig. 7

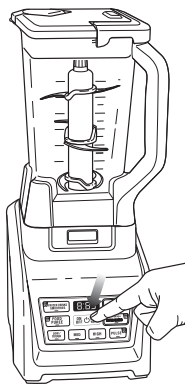 


Fig. 8

**⚠ WARNING:** Never leave the appliance unattended while in use.

**NOTE:** Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology can sense which jar is on the motor base. The function lights will illuminate depending on which jar is placed on the motor base. **(Fig. 6)**

9 Press the power button to turn on the unit. Select the speed or Auto-iQ™ program that best suits your needs. The Auto-iQ™ program will stop the appliance automatically at the end of the program. **(Fig. 7)**

**NOTE:** Pulse ingredients for even chopping by holding the Auto-iQ™ Pulse button until your desired consistency is reached.

10 To pause the appliance, press the selected speed or Auto-iQ™ Program a second time. **(Fig. 8)**

11 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Stacked Blade Assembly to stop turning. **(Fig. 8)**

12 Turn the pitcher counter clockwise to remove and then lift off the base. **(Fig. 9)**

### REMOVAL

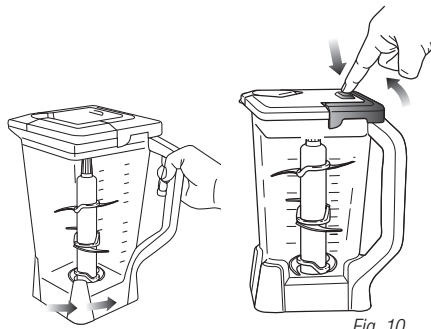 


Fig. 10



Fig. 9

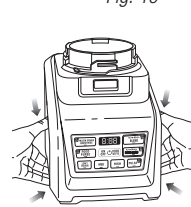 


Fig. 11

**⚠ CAUTION:** Never insert your hands in the pitcher as the Stacked Blade Assembly is sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

13 Depending on the consistency of the contents in the container, open the pour spout cap and use the spout to empty liquid contents.

**⚠ CAUTION:** Stacked Blade Assembly is not locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher.

14 For thicker consistencies, remove the lid and Stacked Blade Assembly carefully (by its shaft), then empty contents from the container. To remove the lid, press the release button on the lid and pull the lid handle up to a 90° angle and lift the lid off the blender pitcher. **(Fig. 10)**

**⚠ CAUTION:** Stacked Blade Assembly is not locked in place. If pouring with the lid removed, ALWAYS remove the blade assembly first.

15 Make sure that the unit is unplugged when not in use.

16 To release the motor base from the counter or table top, place your hands underneath both sides of the motor base and gently pull the unit up and towards you. **(Fig. 11)**

## Assembly and Use for the Processor Bowl

**⚠ WARNING:** Never leave the appliance unattended while in use.

**⚠ WARNING:** Remove utensils prior to processing.

**⚠ CAUTION:** Use caution when handling the Chopping Blade Assembly as the blades are very sharp.

**⚠ IMPORTANT:** Make sure that the motor base is plugged in for use.

### ASSEMBLY



Fig. 1



Fig. 2

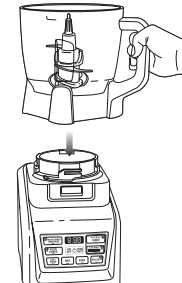 


Fig. 3

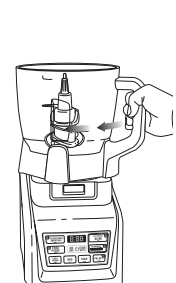 


Fig. 4

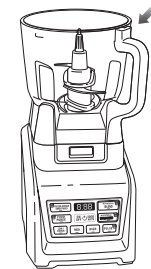 


Fig. 5a

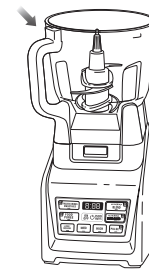 


Fig. 5b

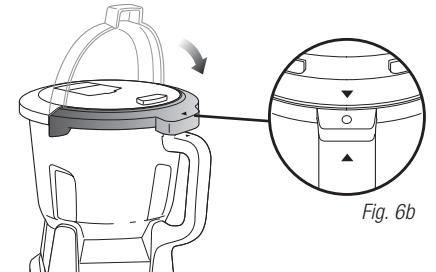 


Fig. 6b

**NOTE:** Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology can sense which jar is on the motor base. The function lights will illuminate depending on which jar is placed on the motor base. **(Fig. 1)**

1 Holding the desired blade assembly by the top of the shaft, place it onto the drive gear inside the bowl. Ensure that the desired blade assembly is seated properly and is standing upright. **(Fig. 2)**

**NOTE:** The blade assembly will fit loosely on the drive gear.

**⚠ CAUTION:** Blade assemblies are sharp and not locked in place.

2 Place the motor base on a clean, dry, level surface such as a counter or table top. Press down on the motor base to make sure that the suction cups adhere to the counter or table top.

3 Align and lower the Processor Bowl onto the motor base. **(Fig. 3)** Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.

4 Rotate the bowl clockwise until it locks in place, you will hear a click when the lock is engaged. **(Fig. 4)**

5 The bowl can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. **(Fig. 5a, Fig. 5b)**

6 Add the ingredients to the bowl, making sure that they do not exceed the highest measured marking line on the side of the bowl.

7 Holding the lid by the handle in the upright position, place it on top of the Processor Bowl aligning the triangle (▼) located on the lid with the triangle (▲) located on the Processor Bowl handle. **(Fig. 6a)** Press the handle down until you hear a click. The triangles on the lid and the Processor Bowl handle **MUST** be aligned in order for the blender to turn on. **(Fig. 6b)**

**NOTE:** The 64 oz. bowl is not intended for blending drinks. Do not overfill.

 
**NOTE:** To add liquids during blending, open the drizzle hole on the top of the lid and pour the liquid slowly into the mixture.

8 Plug the power cord into the electrical outlet and press the power button (⏻).

**IMPORTANT:** As a safety feature, the power button (⏻) will flash and the motor will not work if the bowl and lid are not installed correctly. When the bowl and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.

## Assembly and Use for the Processor Bowl - cont.

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **WARNING:** Remove utensils prior to processing.
- ⚠ **CAUTION:** Use caution when handling the chopping blade assembly as the blades are very sharp.

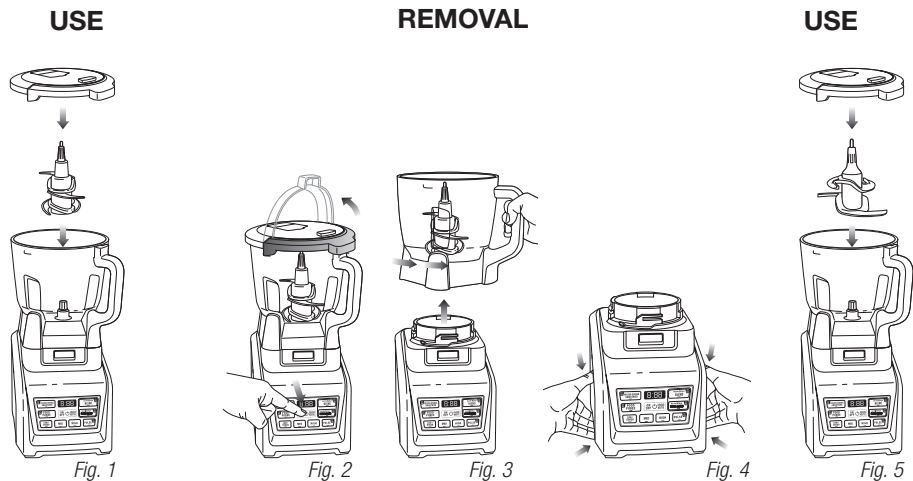

### USING THE CHOPPING BLADE ASSEMBLY

 
- 1 Holding the Chopping Blade Assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the blade assembly fits around the gear shaft and that it is standing straight. (Fig. 1)
- 2 Add the ingredients and secure the bowl lid onto the bowl. (Fig. 1)
- 3 Plug the power cord into the electrical outlet and press on the power button (⏻). Select the speed or Auto-iQ™ program that best suits your needs. Pulse ingredients for even chopping by **holding** the Auto-iQ™ Pulse button until your desired consistency is reached.  
**NOTE:** Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.
- 4 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Chopping Blade Assembly to stop turning. (Fig. 2)
- 5 To remove the lid, press the release button on the lid and pull the lid handle up to a 90° angle. (Fig. 2)
- 6 Turn the bowl counter-clockwise and lift it to remove it from the motor base. (Fig. 3)
- 7 To release the motor base from the counter or table top, place your hands underneath both sides of the motor base and gently pull the unit up and towards you. (Fig. 4)

### USING THE DOUGH BLADE ASSEMBLY

- 1 Holding the Dough Blade Assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the blade assembly fits around the gear shaft and that it is standing straight. (Fig. 5)
- 2 Add the ingredients and secure the bowl lid onto the bowl.
- 3 Plug the power cord into the electrical outlet and press on the power button (⏻). Select LOW/DOUGH on the control panel and process until ingredients come together to form a mass.  
**NOTE:** Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.
- 4 Once finished making dough, stop the appliance by pressing the power button (⏻) and wait for the Dough Blade Assembly to stop turning. (Fig. 2)
- 5 To remove the lid, press the release button on the lid and pull the lid handle up to a 90° angle. (Fig. 2)
- 6 Turn the bowl counter-clockwise and lift it to remove it from the motor base. (Fig. 3)
- 7 To release the motor base from the counter or table top, place your hands underneath both sides of the motor base and gently pull the unit up and towards you. (Fig. 4)

## Assembly and Use for the Mini Prep Bowl

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **WARNING:** Remove utensils prior to processing.
- ⚠ **CAUTION:** Use caution when handling the Mini Prep Bowl Blade Assembly as the blades are very sharp.

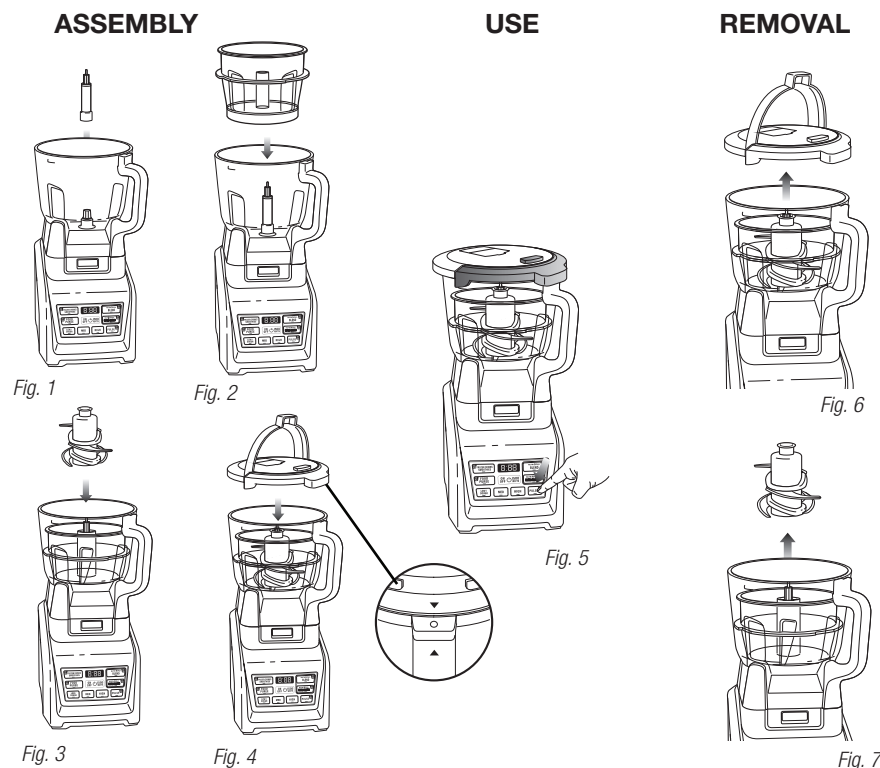

### USING THE 3 CUP MINI PREP BOWL

**NOTE:** The mini prep bowl must be used with the flat food processor lid.

- ⚠ **WARNING:** Remove utensils prior to processing.
  - ⚠ **CAUTION:** Mini Prep Bowl Blade Assembly is sharp and not locked in place.
- 1 Place the Food Processor Bowl onto the motor base.
  - 2 Holding the spindle by the shaft, place it onto the gear shaft inside the Food Processor Bowl. Ensure that the spindle fits around the gear shaft and that it is standing straight. (Fig. 1)
  - 3 Place the mini prep bowl aligning the spindle inside the center post. (Fig. 2)
  - 4 Hold the Mini Prep Bowl Blade Assembly by the shaft and carefully place it over the center post of the mini prep bowl. (Fig. 3)
  - 5 Add ingredients into the mini prep bowl.
  - 6 Holding the lid by the handle in the upright position, place it on top of the Food Processor Bowl aligning the arrow (▼) located on the lid with the arrow (▲) located on the bowl's handle. (Fig. 4) Press the handle down until you hear a click.

- 7 Plug the power cord into the electrical outlet and press on the power button (⏻).
- 8 Select the speed that best suits your needs. For best results, hold the Auto-iQ™ Pulse button down until you have reached your desired consistency. (Fig. 5)  
**NOTE:** Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.
- 9 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Mini Prep Bowl Blade Assembly to stop turning.
- 10 To remove the lid, pull the lid handle up to a 90° angle and lift the lid off. (Fig. 6)
- 11 Carefully hold the Mini Prep Bowl Blade Assembly by the shaft and lift it out of the mini prep bowl. (Fig. 7)
- 12 Turn the bowl counter clockwise and then lift off the base.  
**⚠ CAUTION:** If pouring from the bowl, ALWAYS remove the Mini Prep Bowl Blade Assembly first before pouring.

## Assembly and Use for the Nutri Ninja® Cups

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **WARNING:** Remove utensils prior to processing.
- ⚠ **CAUTION:** Use caution when handling the Pro Extractor Blades® Assembly as the blades are very sharp.
- ⚠ **CAUTION:** Do not blend hot liquids.
- ⚠ **IMPORTANT:** Make sure that the motor base is plugged in for use.

### ASSEMBLY

### USE

### REMOVAL

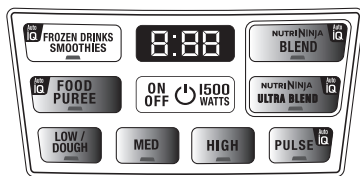 


Fig. 1

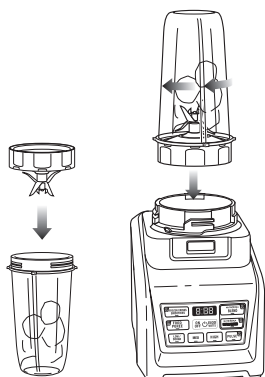 


Fig. 2

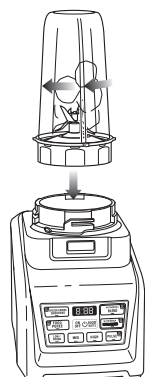 


Fig. 3

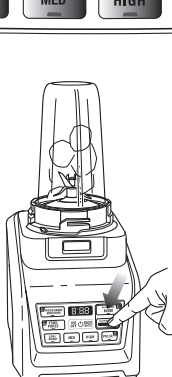 


Fig. 4

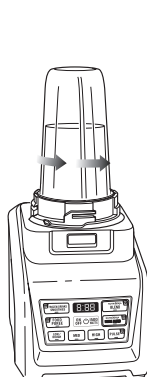 


Fig. 5

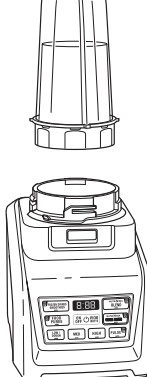 


Fig. 6

**NOTE:** Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology can sense which jar is on the motor base. The function lights will illuminate depending on which jar is placed on the motor base. (Fig. 1)

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top. Press down on the motor base to make sure that the suction cups adhere to the counter or table top.
- 2 Add ingredients to the Nutri Ninja® cup.
- 3 Place the Pro Extractor Blades® Assembly onto the cup and tightly screw it on clockwise until you have a good seal. (Fig. 2)
- 4 Turn the Nutri Ninja® cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Rotate the Nutri Ninja® cup clockwise until it locks in place, you will hear a click when the lock is engaged. (Fig. 3)
- 5 Press the power button on, and select the speed or Auto-iQ™ program that suits your needs. The Auto-iQ™ program will stop the appliance automatically at the end of the program. (Fig. 4)

6. To pause the appliance, press the selected speed or Auto-iQ™ Program a second time.
- 7 Once you have reached your desired consistency, turn the power button off. Turn the Nutri Ninja® cup counter-clockwise and pull straight up to remove. (Fig. 5, Fig. 6)

**NOTE:** Do not overfill! To avoid spilling, do not add ingredients past the "Max" liquid line.

- 8 Turn the cup upright and remove the Pro Extractor Blades® Assembly by twisting the blade assembly counter clockwise.
- 9 Place the Sip & Seal® lid onto the Nutri Ninja® cup, twist to seal and enjoy!
- 10 Make sure that the motor base is unplugged when not in use.


- 11 To release the motor base from the counter or table top, place your hands underneath both sides of the motor base and gently pull the unit up and towards you. (Fig. 7)



Fig. 7

## Programs, Speed Settings & Uses for the Blender Pitcher

 
FUNCTION	CONTAINER	BLADE TYPE	SPEED or PROGRAM	TYPE OF FOOD
Frozen Drinks / Ice Crush	Blender Pitcher	Stacked Blade Assembly	Auto-iQ™ Frozen Drinks/ Smoothies	Ice Frozen Drinks Smoothies Milkshakes
Pureeing	Blender Pitcher	Stacked Blade Assembly	Auto-iQ™ Food Puree	Soups*

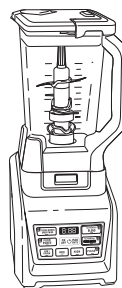

\* When blending soups or sauces, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.

## Programs, Speed Settings & Uses for the Food Processor Bowl

 
FUNCTION	CONTAINER	BLADE TYPE	SPEED or PROGRAM	TYPE OF FOOD
Mincing	Food Processor Bowl	Chopping Blade Assembly	Auto-iQ™ Pulse	Onion Garlic Herbs
Kneading and Dough Mixing	Food Processor Bowl	Dough Blade Assembly	Low/Dough	Bread Dough Pie Dough Pizza Dough Pretzel Dough Cookie Dough
Processing	Food Processor Bowl	Chopping Blade Assembly	Auto-iQ™ Food Puree Low/Dough Medium High	Pâtés Stewed Fruits Dips Apple Sauce Spreads
Emulsifying	Food Processor Bowl	Chopping Blade Assembly	Low/Dough Medium	Salad Dressings Sauces*
Grinding	Food Processor Bowl	Chopping Blade Assembly	Medium	Meat
Grating	Food Processor Bowl	Chopping Blade Assembly	Auto-iQ™ Pulse High	Grated Cheese Bread Crumbs
Chopping	Food Processor Bowl	Chopping Blade Assembly	Auto-iQ™ Pulse	Salsa Vegetables Nuts
Batters	Food Processor Bowl	Dough Blade Assembly	Low/Dough	Cake Mixes Batters

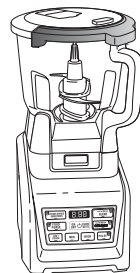

\* When blending soups or sauces, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.



## Programs, Speed Settings & Uses for the Nutri Ninja® Cup

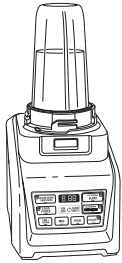 

FUNCTION	CONTAINER	BLADE TYPE	SPEED or PROGRAM	TYPE OF FOOD
Smoothies	Nutri Ninja® Cup	Pro Extractor Blades® Assembly	Nutri Ninja® Auto-iQ™ Blend	Smoothies Protein Drinks
Green Smoothies	Nutri Ninja® Cup	Pro Extractor Blades® Assembly	Nutri Ninja® Auto-iQ™ Ultra Blend	Frozen Fruits Frozen Vegetables Kale Celery Spinach Seeds Ice
Grating	Nutri Ninja® Cup	Pro Extractor Blades® Assembly	Auto-iQ™ Pulse High	Grated Cheese Bread Crumbs
Chopping	Nutri Ninja® Cup	Pro Extractor Blades® Assembly	Auto-iQ™ Pulse High	Salsa Vegetables

## Care & Maintenance

### HOW TO CLEAN

**⚠ CAUTION: Make sure that the motor base is unplugged from the power source before inserting or removing any blade assembly and before cleaning.**

**⚠ CAUTION: DO NOT immerse the motor base into water or any other liquid.**

**⚠ CAUTION: Use caution when handling the blade assemblies as the blades are very sharp.**

- 1 Separate/remove all parts from each other.
- 2 Clean the motor base with a damp cloth and wipe dry.
- 3 Place the blender pitcher, Nutri Ninja® cup, mini prep bowl, and food processor bowl in the dishwasher. Place the lids and Blade Assemblies on the top rack.

### OR

- 4 Carefully hand wash the lids, blender pitcher, food processor bowl, mini prep bowl, Nutri Ninja® cups and blade assemblies in warm, soapy water with a soft cloth.  
Please call customer service if any servicing needs to be performed on the appliance at 1-877-646-5288.

### HOW TO STORE

- 1 Store the Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology upright with the pitcher on the motor base, Stacked Blade Assembly inside the pitcher and lid latched on to the pitcher. Do not place anything on top. Store the Food Processor Bowl with the Chopping Blade Assembly inside and the lid fastened on top. Store the Nutri Ninja® cup and the rest of the Blade Assemblies along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard.

### RESETTING THE MOTOR THERMOSTAT

The Nutri Ninja® | Ninja® Blender System with Auto-iQ™ Technology features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. **If the appliance is being overloaded, the motor will stop. Allow the appliance to cool for approximately 15 minutes.** To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the container and ensure that no food is jamming the Blade Assembly.
- 3 Allow the appliance to cool for approximately 15 minutes.
- 4 Re-install the container onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

**ONE (1) YEAR LIMITED WARRANTY**

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
<b>Motor Doesn't Start or Blade Assembly Doesn't Rotate.</b>	<p>Make sure the container is securely locked on the motor base.</p> <p>Make sure the lid is securely on the container in the correct position (align arrows).</p> <p>The appliance is turned "Off". Press the power button (⏻) to turn "On".</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check the fuse or circuit breaker.</p> <p>The unit has overloaded. The appliance will stop and the power light will flash. Unplug and wait approximately 15 minutes before using again.</p> <p>The unit has overheated. Unplug and wait approximately 15 minutes before using again.</p> <p>Check to make sure the unit is not overloaded.</p>
<b>Food is Unevenly Chopped.</b>	<p>Either you are chopping too much food at one time, or the pieces are not of even size and processing smaller amounts per batch.</p>
<b>Food is Chopped Too Fine or is Too Watery.</b>	<p>The food has been over processed. Use Auto-iQ™ Pulse button for controlled processing.</p>
<b>Food Collects On Lid or On the Sides of the Container.</b>	<p>The mixture is too thick. Add more liquid.</p>
<b>You Cannot Achieve Snow From Solid Ice.</b>	<p>Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.</p> <p>Start with a few pulses and then go to a continuous blending cycle.</p>
<b>Motor Base Won't Stick to Counter or Table Top.</b>	<p>Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces. Suction feet WILL NOT stick on some surfaces such as, wood, tile and non-polished finishes.</p> <p>DO NOT attempt to use appliance when the motor base is stuck to a surface that is not secure, (cutting board, platter, plates, etc.).</p>
<b>You get an "Err" Message</b>	<p>Your Ninja® is able to detect which jar is on the base. You may be trying to use a program that is not designed for the jar you have installed. The programs will light up indicating which programs are available for each jar.</p>
<b>You have a blinking red light</b>	<p>The unit is not installed properly. For your safety the unit will only be able to be turned on when it is properly assembled. Please refer to the assembly pages of this inspiration guide for assistance.</p>

**SharkNinja Operating LLC** warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of **SharkNinja Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This Limited Warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This Limited Warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by **SharkNinja Operating LLC**.

If your appliance fails to operate properly while in use under normal household conditions within the Limited Warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For Customer Service support, call 1-877-646-5288 or visit our website [www.ninjakitchen.com](http://www.ninjakitchen.com).

If the appliance is found by **SharkNinja Operating LLC** to be defective, in **SharkNinja Operating LLC's** sole discretion, we will repair or replace it free of charge. Proof of purchase date and a check made payable to **SharkNinja Operating LLC** in the amount of \$19.95 to cover the cost of return shipping and handling must be included.\*

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **SharkNinja Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. In no event is **SharkNinja Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

**\*IMPORTANT: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".**

**PRODUCT REGISTRATION**

Please visit [www.ninjakitchen.com](http://www.ninjakitchen.com) or call **1-877-646-5288** to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

**Replacement Parts**

**ORDERING REPLACEMENT PARTS**

To order additional parts and attachments, please visit our website: [www.ninjakitchen.com](http://www.ninjakitchen.com) or feel free to contact customer service: **1-877-646-5288**.

SharkNinja Operating LLC

US: Newton, MA 02459

CAN: Ville St-Laurent, QC H4S 1A7

**1-877-646-5288**

**[www.ninjakitchen.com](http://www.ninjakitchen.com)**

**Ninja, Nutri-Ninja, Pro Extractor Blades Sip & Seal** and **Total Crushing** are registered trademarks of SharkNinja Operating LLC.

**Auto-iQ** is a trademark of SharkNinja Operating LLC.

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

For SharkNinja U.S. Patent information visit [www.europro.com/USPatents](http://www.europro.com/USPatents)

© 2015 SharkNinja Operating LLC

BL682Q\_Series\_30\_IB\_150814\_1

PRINTED IN CHINA