

# MUSICAL SNOW GLOBE

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

## INSTRUCTION MANUAL

### 1. DESCRIPTION

Thank you for purchasing the **MUSICAL SNOW GLOBE**. This product features decorative details, blowing snow and a timer. This product is not a toy and is not intended for use by children. For decorative and indoor use only.

### 2. OPERATION

- A. Remove the **MUSICAL SNOW GLOBE** from the packaging.
- B. Open the battery cover and insert 3 x AA batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the compartment.
- C. Close the battery cover.
- D. The OFF / TIMER switch is located on the bottom of the unit.
  1. Switch to "TIMER" position to activate the lights in the scene.
  2. Switch to "OFF" position to deactivate the lights.
- E. Timer function is 4 hours on / 20 hours off.
  1. The lights will activate when the switch is moved to the "TIMER" position and remain lit for 4 hours.
  2. After the 4 hour period, the lights will automatically deactivate.
  3. The lights will once again activate after a 20 hour period.
  4. The timer function will automatically cycle through steps 1-3 until the timer is reset.
  5. Move the OFF / TIMER switch to "OFF" then "TIMER" to restart the 4 hours on / 20 hours off function.



- F. Press the "Push to Play" button located in the center of the snowflake pictured above while in "TIMER" mode to activate the music and the snow animation.
  1. One song will play and the snow will blow each time the button is pressed.
  2. When the button is pressed while the TIMER is in the 20 hour sleep cycle, the lights and snow animation will activate while the song plays, then resume sleep mode.
  3. No music or lights will activate if the "Push to Play" button is pressed while the OFF / TIMER switch is in the "OFF" mode.

### 3. TROUBLESHOOTING

<u>PROBLEM</u>	<u>LIKELY CAUSE</u>	<u>SOLUTION</u>
No Light	Batteries not inserted correctly	Make sure to align the "+" and "-" as marked inside the battery compartment.
	Timer is on	Unit will restart at the end of the 20-hour cycle. To start immediately, move the timer switch to "OFF" and then to "TIMER."
	Switch is at "OFF" position	Turn the switch to "TIMER" position.
	Batteries exhausted	Change to new batteries.
No Snow	Snow build up	Shake snow globe gently.
No Music or Snow	Music and snow not activated	Press the "Push to Play" button to play the song and activate the snow animation.
Song Restarts	"Push to Play" button was pressed while the song was playing	Wait until the song completes before pressing the "Push to Play" button again

### 4. CARE INSTRUCTIONS

- A. Do not expose this item to moisture or outdoors. This item is for indoor use only.
- B. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
- C. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
- D. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
- E. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

## 5. SAFETY INSTRUCTIONS AND WARNINGS

**WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS, WHICH COULD CAUSE CHOKING IF SWALLOWED.**

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.

PLEASE ADHERE TO THE FOLLOWING:

1. Read Instructions - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
2. Heat - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
3. Moisture - The item should be situated away from water or any other liquids. Do not splash, spill or immerse this item into any liquid.
4. Damage Requiring Service - Have a qualified service personnel service this item when:
  - A. All troubleshooting techniques have been tried and the item will not work or has stopped working.
  - B. The item has been dropped or the enclosure damaged.

NOTE: Do not dispose batteries in fire. Batteries may explode or leak. Do not mix old and new batteries. Replace all batteries at the same time. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove fully discharged batteries immediately. Batteries should be recycled or disposed of as per state and local guidelines.

### **Federal Communications Commission Code, Part 15:**

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) reorient or relocate the receiving antenna;
- (b) increase the separation between the equipment and the receiver;
- (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- (d) consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*The following is only applicable to customers in the USA:*

For more information about this product, please call 1-800-467-9627 or contact us at [support@mrchristmas.com](mailto:support@mrchristmas.com). We will be happy to help you!

## 6. NINETY-DAY LIMITED WARRANTY

Manufacturer warrants the original customer / purchaser of the **MUSICAL SNOW GLOBE** that they will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the original consumer / purchaser specific legal rights. The original consumer / purchaser may also have other rights which vary from state to state.

---

ACTUAL PRODUCT MAY VARY SLIGHTLY FROM PHOTOGRAPHS / DRAWINGS IN THE INSTRUCTION MANUAL

---